


Item No. HS11A-1C0

Operation Instruction

1. Product Outline

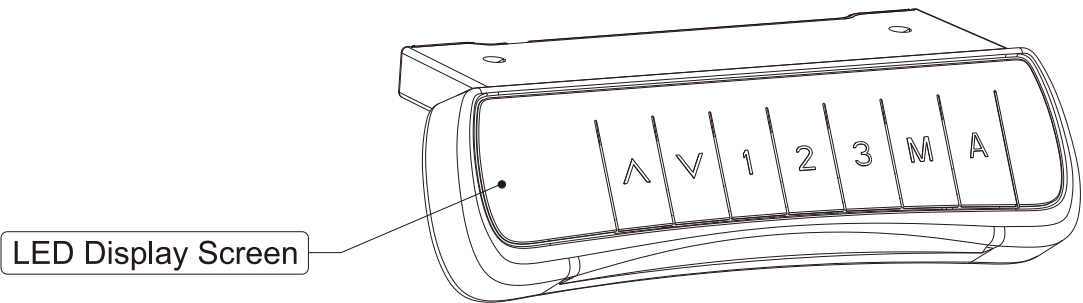

2. Product Specification

1.Button Introduction: There are a total of 7 buttons, including:"▲"、"▼"、"1"、"2"、"3"、"M"、"A"

- (1) "▲": Up button, used to adjust the height of the desk to move upward;
- (2) "▼": Down button, used to adjust the height of the desk to move downward;
- (3) "1": Position 1, the user's saved first height position;
- (4) "2": Position 2, the user's saved second height position;
- (5) "3": Position 3, the user's saved third height position;
- (6) "M": Save button, used to save the height position;
- (7) "A": Automatic reminder key, used to enter the automatic reminder function.

3. Operating Instructions

● Height Adjustable Function

By pressing the "▼" or "▲" keys, you can adjust the height of the desk up or down, and the current height will be displayed on the screen.

● Height-saving Function

- a. Use the "▼" or "▲" to adjust the table to the desired level. Press the "M" save key, and the display screen will show "5-". Next, press the "1" or "2" or "3" key to save the height to the corresponding position 1, 2, or 3. Correspondingly, the display screen will show "5-1"or "5-2"or "5-3".
- b. Press the "1", "2", or "3" key to automatically adjust the desk to the previously saved height.

● Sedentary reminder function

- a. Press the "A" sedentary reminder button once to activate the automatic reminder function. The display screen will show "00" or "on"
- b. After 2 seconds, the display screen will flash and show the current set sedentary reminder time. By default, the sedentary time is set to 45 minutes and displayed as "45". At this point, you can press the "▲" or "▼" buttons to adjust the sedentary time. Once the adjustment is done, you can press any key to save the current set time. Alternatively, if you wait for 5 seconds while the screen is flashing, the system will automatically save the current set time. After the time setting is saved, the system will enter the countdown. If there is lifting operation during the countdown, the system will restart the countdown. When the time display shows "00", the buzzer will sound for 10 seconds, producing a "beep.. beep.. beep.." prompt.
- c. If there is a lifting operation within 10 seconds, the automatic reminder function will enter the next countdown, and the timing will be the time set in step (b) by the user. If no lifting operation within 10 seconds, it will be reminded again after 5 minutes. If still no lifting operation, the system will automatically exit the reminder function;
- d. Press and hold the "A" button for 3 seconds, the display screen will show "OFF" or "OFF", indicating that the automatic reminder function is turned off.

● Adjust the Anti-collision Sensitivity (Optional)

- a. Press and hold the "▲" and "▼" buttons simultaneously for 5 seconds to switch the sensitivity. Each operation will switch to the next level, with a total of 4 levels (A-3,A-2,A-1,A-0).
- b. The LED screen will display "A-0" to deactivate the anti-collision function,"A-1" for low sensitivity, "A-2" for medium sensitivity,"A-3" for high sensitivity.
- c. When the desk encounters an obstacle while raising or lowering, it will immediately bounce back to protect the desk and prevent any damage.
- d. If no sensitivity code is displayed on the LED screen when press and hold the "▲"、"▼"buttons for 5 seconds, it means that the desk does not have the anti-collision function.

● Code Processing:

- a. Reset function definition: The LED display shows "E01" or "E02". The user holds down the down arrow key until the desk lowers to the lowest position and then rebounds up to a stop. The display screen will show the height number. Release the downward button "▼" to complete the reset process.
- b. If you see "E01" or "E02", allow the desk to rest for at least 18 minutes before using it again.
- c. If you encounter any other error codes and the "▼" button does not respond, please check if the connection cable is undamaged and properly connected. Disconnect the power for at least 10 seconds, then reconnect it. The LED screen will display "E01" or "E02". Press and hold the "▼" button to reset.
- d. If you have followed the above steps and the desk still does not function properly, please contact customer service for further assistance.

Waste disposal



This sign indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can recycle the product , ensuring environmental safety.